


# *R. C. Tronics Incorporated*

2573 East Kercher Road  
Goshen, Indiana 46528  
Toll Free 1-866-457-7790

Phone 1-574-642-3857  
Fax 1-574-642-3858  
<http://www.rctronics.com>

## Add Sequencing RCT-00498 To Ambulance Power Center RCT-743

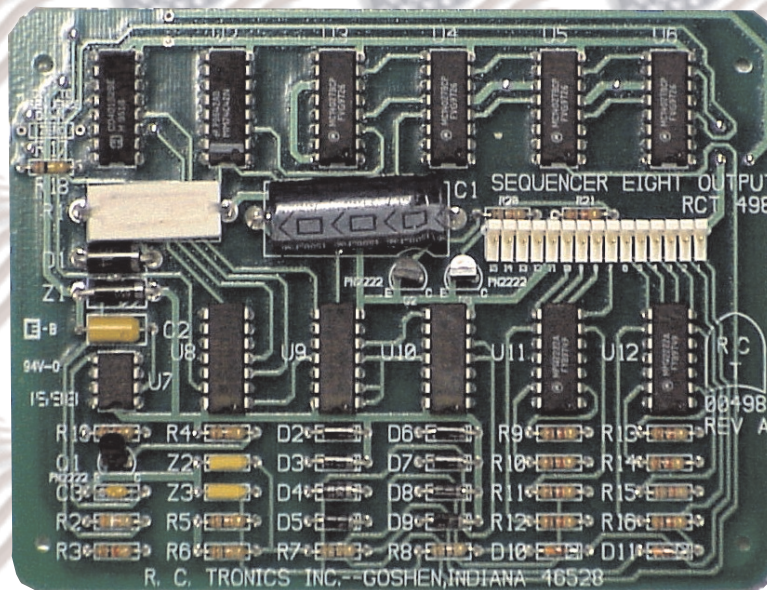

*Remove Dash Switch PCB. Verify that it is RCT-745, Revision C.*

*Remove Resistors R20-21-22-23-24-25 and R26 on RCT-745.*

RCT-498 Sequencer mounts to the rear of the RCT-745 switch PCB. Feed data cable thru opening. With 4 each Key-1894 Standoff and eight 4-40 x 3/8 machine screws mount the sequencer to switch PCB. Be careful, not to pinch the wiring of data cable. This clearance is tight.

**Note:** When reinstalling we suggest removing the switches which are mounted in the faceplate. Then placing RCT-00745 switch PCB behind faceplate and installing individual switches one at a time into PCB.

Once all are installed, snap faceplate around all switch bezels.  
Reconnect all wiring insuring connectors are mated correctly.

**Remove R17 to Sequence Down.**